

QSE-CI-DMX Control Interface

Description

The QSE-CI-DMX operates either in a standalone QS system or a Quantum® system. It performs different functions depending on the system in which it is operating.

QS Standalone System

The QSE-CI-DMX control interface allows zones on a GRAFIK Eye® QS to control DMX512-controlled devices. Any zone on the GRAFIK Eye® QS can be mapped to either a single DMX512 channel or to three separate DMX512 channels, for RGB/CMY color-control applications.

Quantum® System


The DMX channels (maximum of 32) are mapped to Quantum® zones, and can be programmed as 1-channel lighting, 1-channel integration, or 3-channel RGB/CMY. If the QSE-CI-DMX is part of a Quantum® system, GRAFIK Eye® QS zones cannot be programmed to control DMX channels.

Key Features

- Map any zone on a GRAFIK Eye® QS control unit or any Quantum® zone to any single DMX512 channel
- Map any zone on a GRAFIK Eye® QS control unit or any Quantum® zone simultaneously to three DMX512 channels for RGB/CMY color-control
- Integral RGB/CMY lookup table that maps GRAFIK Eye® QS zone intensities or Quantum® zone intensities to RGB/CMY values (colors)
- RGB/CMY table can be customized by using the Lutron QS Color Configuration Tool (PC application available on the CD packaged with the QSE-CI-DMX, and on www.lutron.com/qs), or within the Quantum® Q-Design™ software

Limitations

- In a Quantum® system, only 32 DMX channels can be programmed per device. The 32 channels can be any of the 512 available addresses, so DMX combiners can be used if more than 32 DMX channels need to be controlled from a single DMX universe.
- Daylighting is not supported for DMX loads.
- Loadshedding is not supported for DMX loads.
- Nightlighting is not supported for DMX loads.
- 1-channel lighting can be raised/lowered, but 1-channel integration and RGB can not. (Note: In a stand-alone system, raise/lower cycles through the RGB color table.)

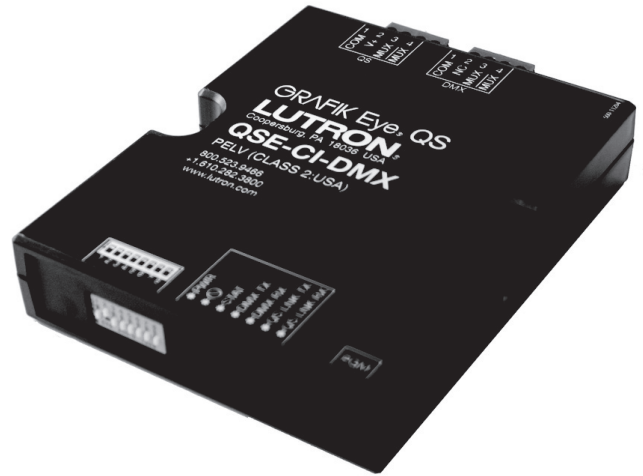

Requirements

- The QSE-CI-DMX requires the following:
- At least one GRAFIK Eye® QS control unit connected to the QSE-CI-DMX through the QS communication link,
 - or*
 - A Quantum® system
 - QS Link power supply; either:
 - GRAFIK Eye® QS control unit, as long as the GRAFIK Eye® QS control unit is NOT powering any other QS link devices drawing a total of two (2) or more power draw units
 - QS Link power supply, such as the QSPS-P1-1-50
 - or*
 - a Quantum® Light Management Hub
 - Note that the QSE-CI-DMX consumes 2 power draw units on the QS link; see the QS Link Requirements and Wiring section for more information
 - DMX512 link terminators at both ends of the DMX512 link (available from Lutron, part number LT-1)
 - QS Communication Link Wire (IEC PELV/NEC® Class 2)
See the Wire Sizes table.

LUTRON® SPECIFICATION SUBMITTAL

Page

Job Name:	Model Numbers:
Job Number:	

Example Application

The QSE-CI-DMX can be programmed so that any or all zones on a GRAFIK Eye® QS control unit can control either 3 channels (e.g., RGB) or 1 channel (i.e., intensity of a single light). Raising or lowering a zone will change the color (for a 3-channel zone) or the intensity (for a 1-channel zone).

If, for example, you have an RGB LED fixture and a single stage light, you can configure your settings so that:


- Channels 3, 4, and 5 correspond to the red, green, and blue channels on the RGB LED fixture
- Channel 7 corresponds to the stage light

You can then set up the GRAFIK Eye® QS control unit so that:

- Zone 3's intensity = desired RGB fixture color
- Zone 6's intensity = desired stage light intensity


When you select a preprogrammed scene on the GRAFIK Eye® QS control unit:

- The QSE-CI-DMX converts the scene's zone intensities into DMX512 channel settings.
- The RGB LED fixture will go to the color programmed for that scene, and the stage light will go to the desired intensity.

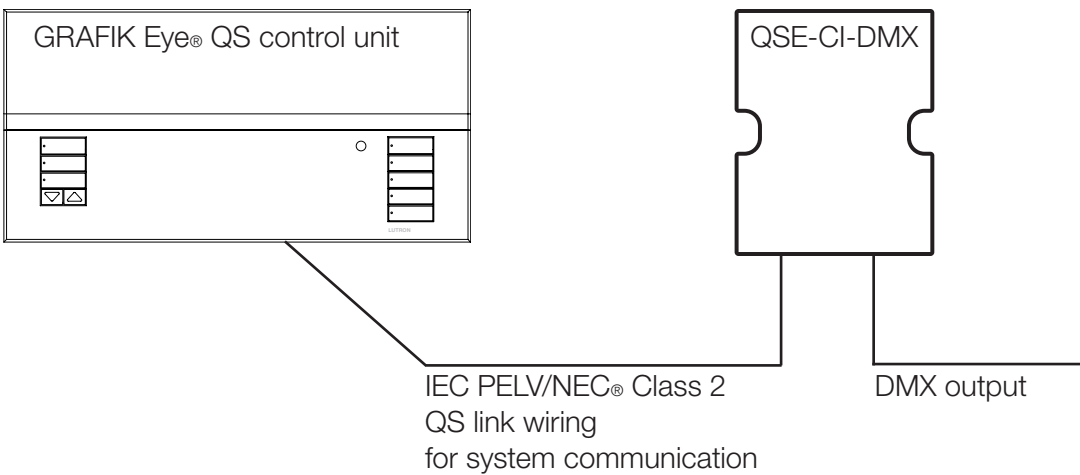


Job Name:	Model Numbers:
Job Number:	


Dimensions

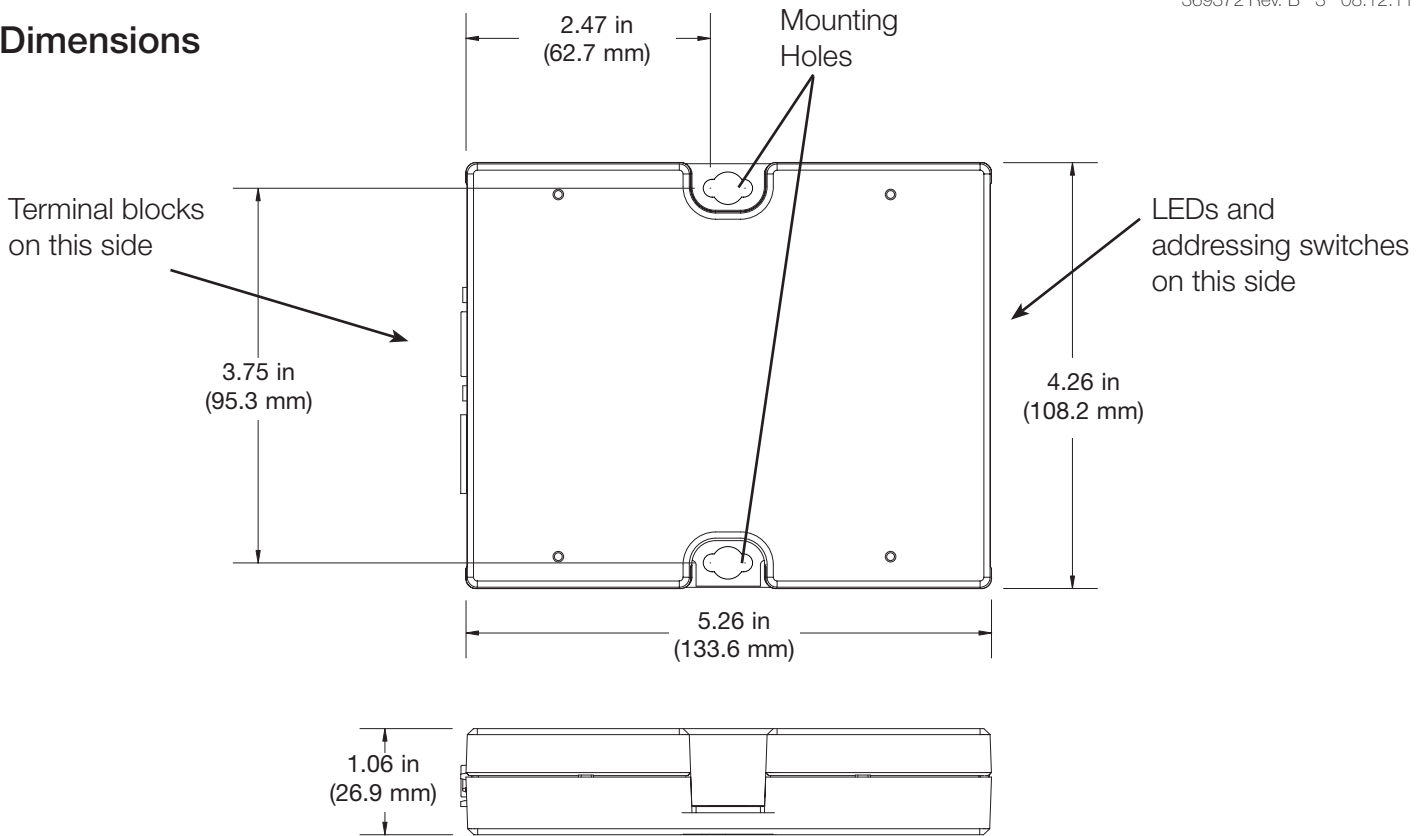


Mounting Diagram

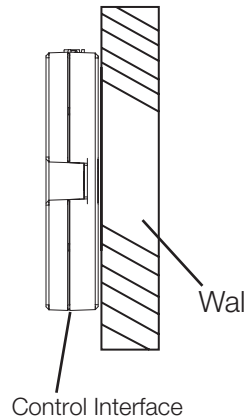

Mounting Hole Detail
Dimensions shown as in (mm)

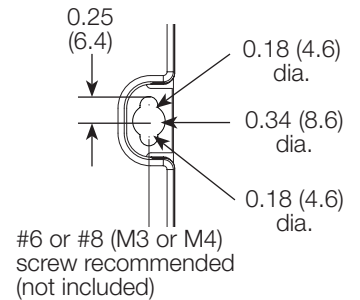

Wire Strip Length

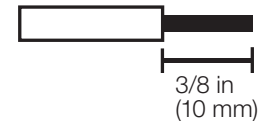

Mounting

1. Mount the control interface directly on a wall, as shown in the Mounting Diagram, using screws (not included). When mounting, provide sufficient space for connecting cables. The unit can also be placed in the LUT-19AV-1U AV rack using the screws provided with the unit. The LUT-19AV-1U will hold up to four units. If conduit is desired for wiring, the LUT-5x10-ENC can be used to mount one unit.
2. Strip 3/8 in (10 mm) of insulation from wires. Each data link terminal will accept up to two 18 AWG (1.0 mm²) wires.
3. Connect wiring as shown in the Wiring Diagram (next page). LED 1 lights continuously (Power) and LED 7 blinks rapidly (Data Link RX) when the IEC PELV/NEC® Class 2 Data Link is installed correctly.



LUT-5x10-ENC



LUT-19AV-1U

Job Name:	Model Numbers:
Job Number:	

Specifications

Power Requirements

- Low-voltage IEC PELV/NEC® Class 2
- Operating Voltage: 24 V $\overline{=}$ 65 mA

Environment

- 32 - 104 °F (0 - 40 °C).
- Relative humidity less than 90% non-condensing.

System Capabilities/Limits

QS Link System Limits (for units controlled by a GRAFIK Eye® QS control unit)

- 100 QS devices per QS link.
- 100 zones per QS link.

QS Link System Limits (for units controlled by a Quantum® system)

- 99 QS devices per QS link.
- 512 switch legs per link (each DMX channel = 1 switch leg).
- 32 DMX channels per QSE-CI-DMX control interface.

QS Link Wiring Limits

- Total length of link must not exceed 2000 ft (610 m).
- Do not allow IEC PELV/NEC® Class 2 wires to contact line/mains wires.

DMX512 Link System Limits

- Consult your DMX equipment installer.

DMX512 Link Wiring Limits

- Each terminal can accept up to two 18 AWG (1.0 mm²) wires.
- Link must be 1000 ft (305 m) or less.
- DMX Link must begin and end with link terminators (available from Lutron; part number LT-1).
- Three pins on the DMX connector for connecting the QSE-CI-DMX to DMX512-controlled equipment.

<p>Job Name:</p> <p>Job Number:</p>	<p>Model Numbers:</p>
--	-----------------------


IEC PELV/NEC® Class 2 QS Link Requirements and Wiring

- System communication uses IEC PELV/NEC® Class 2 wiring.
- Wiring can be daisy-chained or T-tapped (see below).
- Wiring must be run separately from line/mains voltage.
- Total length of control link must not exceed 2000 ft (610 m).
- Connect the terminal 1, 3, and 4 connections to all control units, wallstations, and control interfaces. See Powering the QSE-CI-DMX for pin 2 connectivity.
- The QSE-CI-DMX consumes 2 Power Draw Units (PDUs) on the QS link. For more information, see “Power Draw Units on the QS Link”, PN 369405 at www.lutron.com/qs.


Wire Sizes (check compatibility in your area)

QS Link Wiring Length	Wire Gauge	Lutron Cable Part Number
Less than 500 ft (153 m)	Power (terminals 1 and 2) 1 pair 18 AWG (1.0 mm ²)	GRX-CBL-346S (non-plenum) GRX-PCBL-346S (plenum)
	Data (terminals 3 and 4) 1 twisted, shielded pair 22 AWG (0.5 mm ²)	
500 to 2000 ft (153 to 610 m)	Power (terminals 1 and 2) 1 pair 12 AWG (4.0 mm ²)	GRX-CBL-46L (non-plenum) GRX-PCBL-46L (plenum)
	Data (terminals 3 and 4) 1 twisted, shielded pair 22 AWG (0.5 mm ²)	

Daisy-Chain Wiring Example

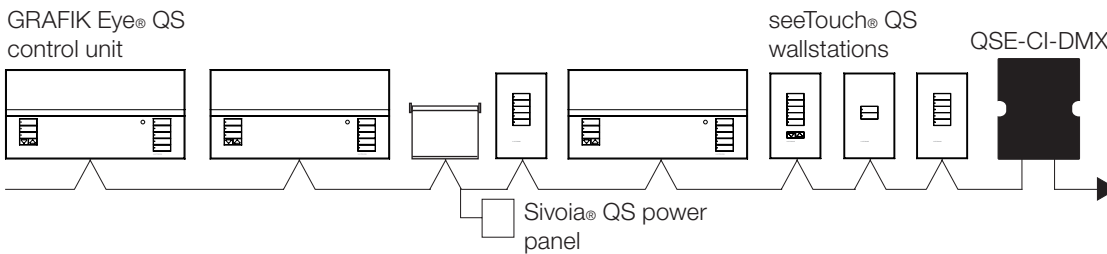

T-Tap Wiring Example

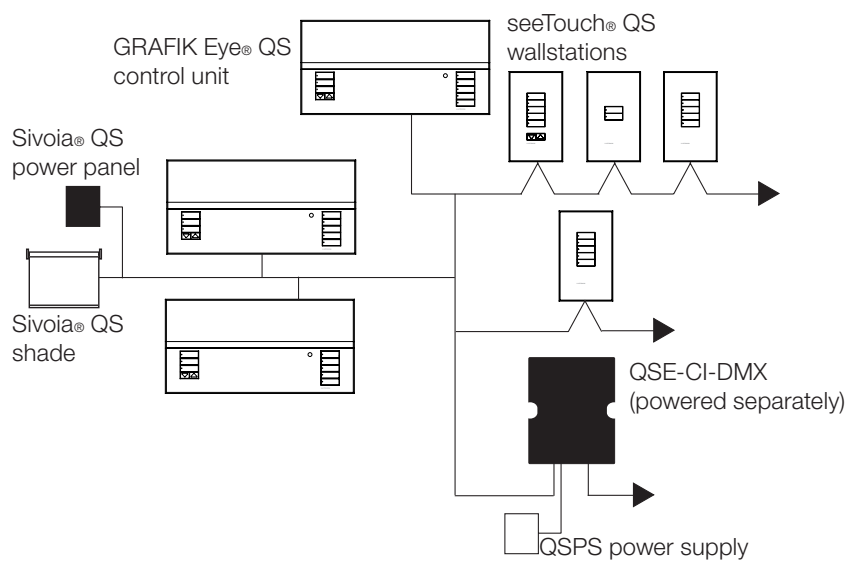


Job Name:	Model Numbers:
Job Number:	

IEC PELV/NEC® Class 2 Terminal Connections

Wire Sizes (check compatibility in your area)

QS Link Wiring Length	Wire Gauge	Lutron Cable Part Number
Less than 500 ft (153 m)	Power (terminals 1 and 2) 1 pair 18 AWG (1.0 mm ²)	GRX-CBL-346S (non-plenum) GRX-PCBL-346S (plenum)
	Data (terminals 3 and 4) 1 twisted, shielded pair 22 AWG (0.5 mm ²)	
500 to 2000 ft (153 to 610 m)	Power (terminals 1 and 2) 1 pair 12 AWG (4.0 mm ²)	GRX-CBL-46L (non-plenum) GRX-PCBL-46L (plenum)
	Data (terminals 3 and 4) 1 twisted, shielded pair 22 AWG (0.5 mm ²)	

Connect Drain/Shield as shown. Do not connect to Ground (Earth) or Wallstation/Control Interfaces. Connect the bare drain wires and cut off the outside shield.

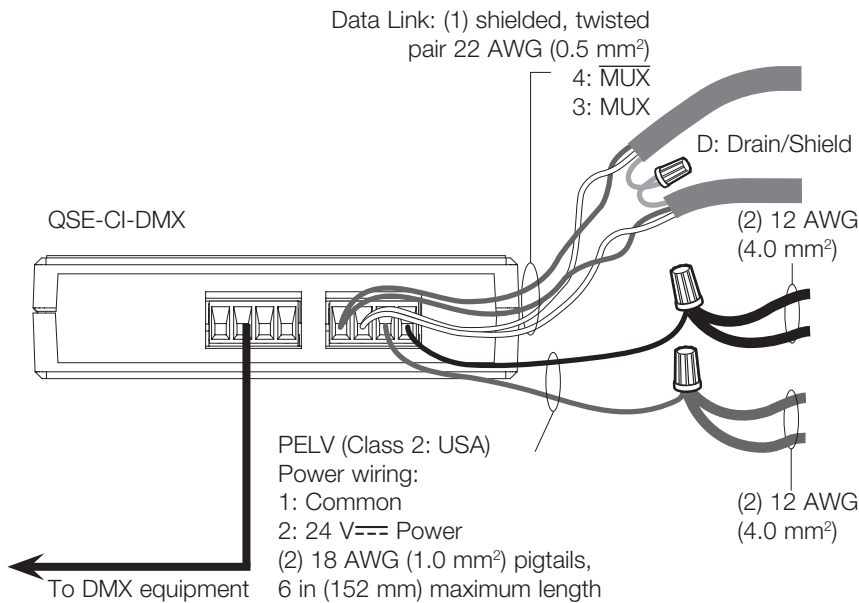

Note: Do not connect Drain/Shield to Ground (Earth) or Wallstation/Control Interfaces. Connect the bare drain wires and cut off the outside shield.

Note: 12 AWG (2.5 mm²) conductors for Common (terminal 1) and 24 V Power (terminal 2) will not fit in terminals; use 18 AWG (1.0 mm²) pigtails (< 6 in/152 mm).


Job Name:	Model Numbers:
Job Number:	

Powering the QSE-CI-DMX


- Power for one QSE-CI-DMX counts as two devices toward the maximum of three devices per GRAFIK Eye® QS control unit when powered off of Pin 2 of the GRAFIK Eye® QS.
- Another option is to power the QSE-CI-DMX from a QS Link power supply (QSPS-P1-1-50, QSPS-P2-1-50, or QSPS-P3-1-50); a QS shade panel power supply (QSPS-P2-10-60 for 230 V~ , or QSPS-P1-10-60 for 120 V~); or a Quantum® light management hub.

Wiring Examples

QSE-CI-DMX Powered by a GRAFIK Eye® QS Control Unit

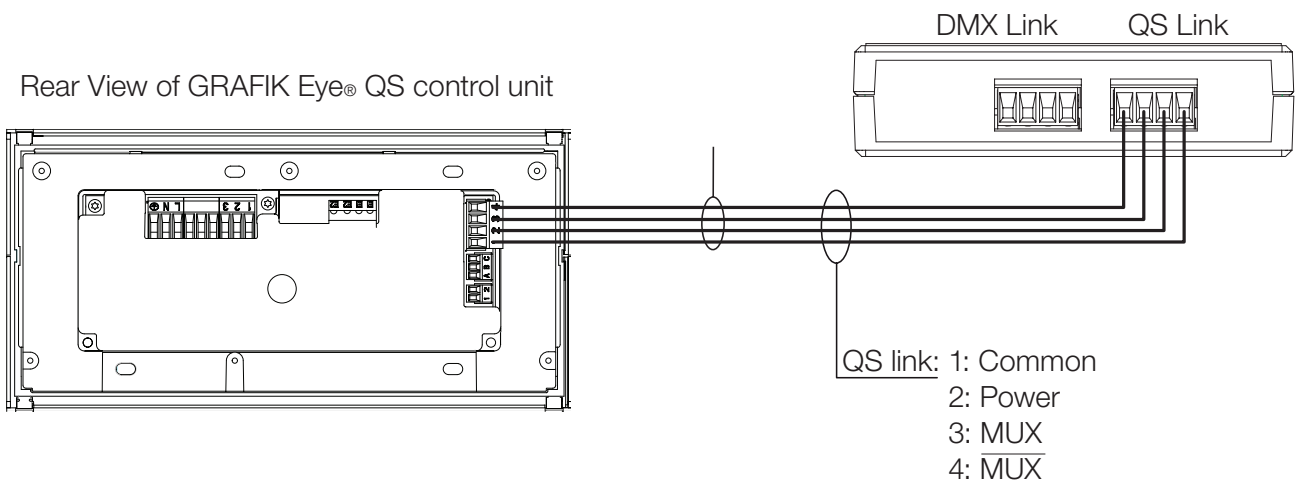

QSE-CI-DMX Powered by a QSPS Power Supply

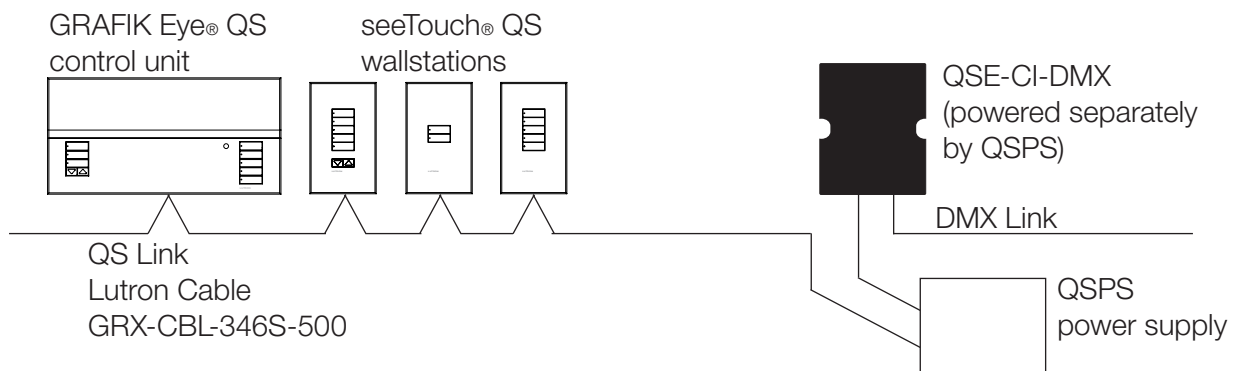

Job Name:	Model Numbers:
Job Number:	

DMX512 Link Wiring

Connect the DMX link terminals on the QSE-CI-DMX interface to input terminals on DMX512-controlled equipment.

- Each terminal on the LUT-DMX accepts two 18 AWG (1.0 mm²) wires.
- Link must be 1000 ft (305 m) or less.
- Link must begin and end with link terminators (available from Lutron; part number LT-1).

Pin on QSE-CI-DMX Terminal	Connection to DMX Equipment
1: DMX512 system COMMON	DMX512 system COMMON Note: Do NOT connect to COMMON on GRAFIK Eye® QS control unit or other Lutron equipment
NC	Not connected
3: DMX512 system DATA +	DMX512 system DATA +
4: DMX512 system DATA -	DMX512 system DATA -

Job Name:	Model Numbers:
Job Number:	